

CHECKING AND ADJUSTING THE INJECTION PRESSURE OF SOLENOID PUMP

1. Take off both plug and copper packing, and attach a pressure gauge.
The gauge must have a capillary tube (a copper pipe of 1 mm inside diameter and 1 meter long). Then switch on.
2. Unfasten the hexagon head nut with a 17 mm spanner, and turn the pressure adjusting screw to adjust the pressure to be 7 Kg/cm^2 .
The pressure increases when the screw is turned clockwise, and vice versa.
3. Fasten the locking nut after adjusting the pressure.

